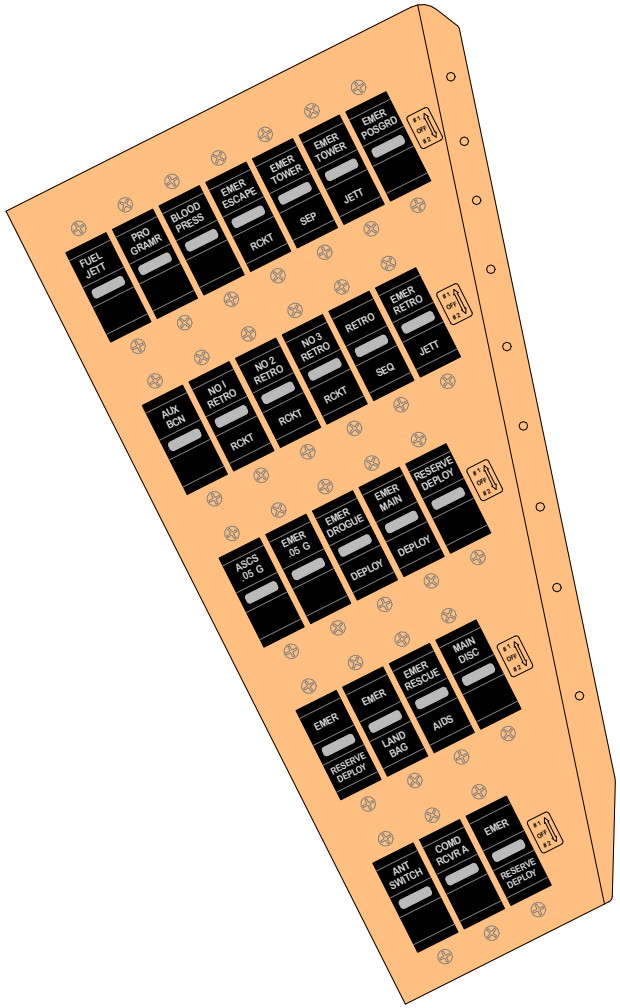
FUEL JETT
PRO GRAMR
BLOOD PRESS
EMER ESCAPE
EMER TOWER
ROKT
EMER TOWER
SEP
EMER TOWER
JETT
EMER POSGRD
AUX BCN
NO 1 RETRO
ROKT
NO 2 RETRO
ROKT
NO 3 RETRO
ROKT
RETRO
SEQ
EMER RETRO
JETT
ASCS .05 G
EMER .05 G
EMER DROGUE
DEPLOY
EMER MAIN
DEPLOY
RESERVE DEPLOY
EMER
RESERVE DEPLOY
EMER
LAND BAG
EMER RESCUE
AIDS
MAIN DISC
ANT SWITCH
COMD RCVR A
EMER
RESERVE DEPLOY

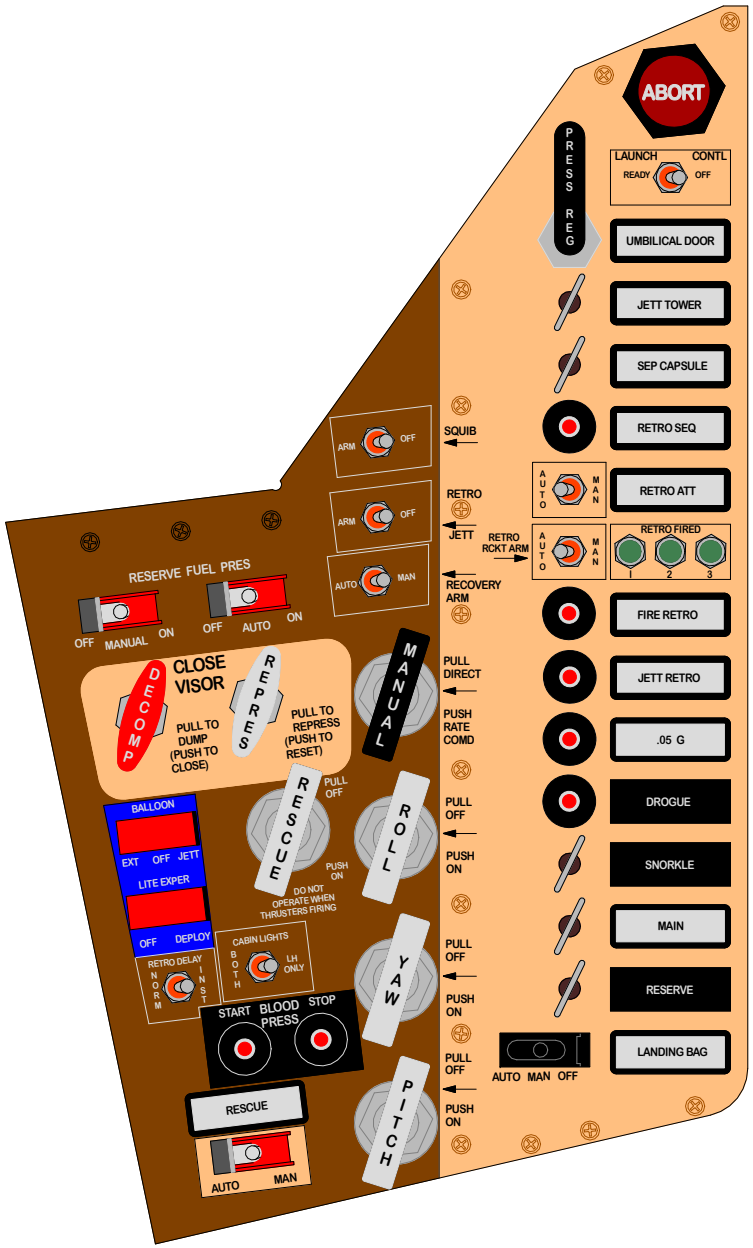
ABORT
PRESS REG
LAUNCH CONTL
READY OFF
UMBILICAL DOOR
JETT TOWER
SEP CAPSULE
RETRO SEQ
RETRO ATT
RETRO FIRED
1 2 3
FIRE RETRO
JETT RETRO
.05 G
DROGUE
SNORKLE
MAIN
RESERVE
LANDING BAG
AUTO MAN OFF
SQUIB
ARM OFF
RETRO
ARM OFF
JETT
AUTO MAN
RETRO RCKT ARM
AUTO MAN
RECOVERY ARM
RESERVE FUEL PRES
OFF MANUAL ON
OFF AUTO ON
DECOMP
CLOSE VISOR
PULL TO DUMP (PUSH TO CLOSE)
REPRES
PULL TO REPRESS (PUSH TO RESET)
MANUAL
PULL DIRECT
PUSH RATE COMD
BALLOON
EXT OFF JETT
LITE EXPER
OFF DEPLOY
RESCUE
PULL OFF
PUSH ON
DO NOT OPERATE WHEN THRUSTERS FIRING
ROLL
PULL OFF
PUSH ON
CABIN LIGHTS
BOTH
LH ONLY
RETRO DELAY
NORM
INST
YAW
PULL OFF
PUSH ON
START BLOOD PRESS STOP
RESCUE
AUTO MAN
PITCH
PULL OFF
PUSH ON